


## HOW TO RIDE — EVERY DAY

#	Action	What happens
1	<b>Approach your scooter</b>	EasyRide detects your phone automatically and unlocks.
2	<b>Turn on the ignition</b>	Double-press the starter button quickly → chime + dashboard lights up.
3	<b>Start the engine</b>	Hold the brake and press the starter as usual.
4	<b>Turn off the engine</b>	Stop, release the brake, double-press the starter → ignition turns off.
5	<b>Walk away</b>	After 5–7 metres - shutdown chime plays and the system locks automatically.

 **The original ignition key** works at all times and in full.

## PAIRING YOUR PHONE

Done once during installation. Only one phone can be paired at a time.

1	Enable Bluetooth in your phone settings.
2	Find “EasyRide-_____” in the device list and tap it to pair.
3	Enter the 6-digit pairing code: _____
4	Your phone will show “Connected”. Done. Keep Bluetooth on while riding.

### **Switching to a new phone?**

First move the old phone out of range (or turn it off). Then pair the new phone using the 6-digit code as usual.

### **Android can't find the device?**

Turn Bluetooth off → close Settings → enable Airplane mode for 2 sec → disable Airplane mode → turn Bluetooth back on.

## STARTING WITHOUT YOUR PHONE — PIN CODE

If your phone is dead or lost, use your personal 3-digit PIN code:

\_\_\_\_\_ to turn on the ignition.

(Example for code 5–1–3. Your personal code is written above.)

1	<b>Hold the starter for 3 sec</b> and release after the chime — PIN entry mode is now active.
2	<b>Enter the 1st digit:</b> press the starter 5 times (each press beeps). Wait 1 sec → short chime = digit accepted.
3	<b>Enter the 2nd digit:</b> press the starter 1 times. Wait 1 sec → chime.
4	<b>Enter the 3rd digit:</b> press the starter 3 times. Wait 1 sec → chime.
5	<b>Hold the starter for 3 sec</b> until the chime → ignition turns on. Wrong code — low-pitched beep, no ignition. Wait 15 sec and retry.

### **Made a mistake while entering?**

Do nothing for 15 seconds — the system resets automatically and you can start over.

### **EasyRide not responding to your phone?**

Check that Bluetooth is on. Take the phone out of your pocket and hold it closer to the unit — there may be interference. Or simply enter your PIN code.

## FREQUENTLY ASKED QUESTIONS

Question	Answer
<b>Will it drain the scooter's battery?</b>	No. Standby current is under 2 mA — it won't drain the battery even after several months of parking.
<b>Can I still use the key?</b>	Yes, fully and at any time.
<b>How do I open the seat?</b>	EasyRide does not control the seat lock. Use the key or install an electric release motor with switch.
<b>How many PIN attempts do I get?</b>	Unlimited. After each wrong entry, wait 15 seconds before trying again.
<b>Rode off without my phone?</b>	The engine will not stall. Warning beeps sound at 5, 15 and 30 sec of riding. Once stopped: enter your PIN.

## WARRANTY & SUPPORT

**2-year warranty** provided there is no physical damage. PIN-related inquiries require proof of purchase.

 **Email**  
info@smartmoto.asia

 **LINE**  
@smartmoto.asia